


1. Soil
2. Lagging
3. Ecodrain-E
4. Ecoline-S (60-mil)
5. Soldier Beam
7. Shot crete Wall

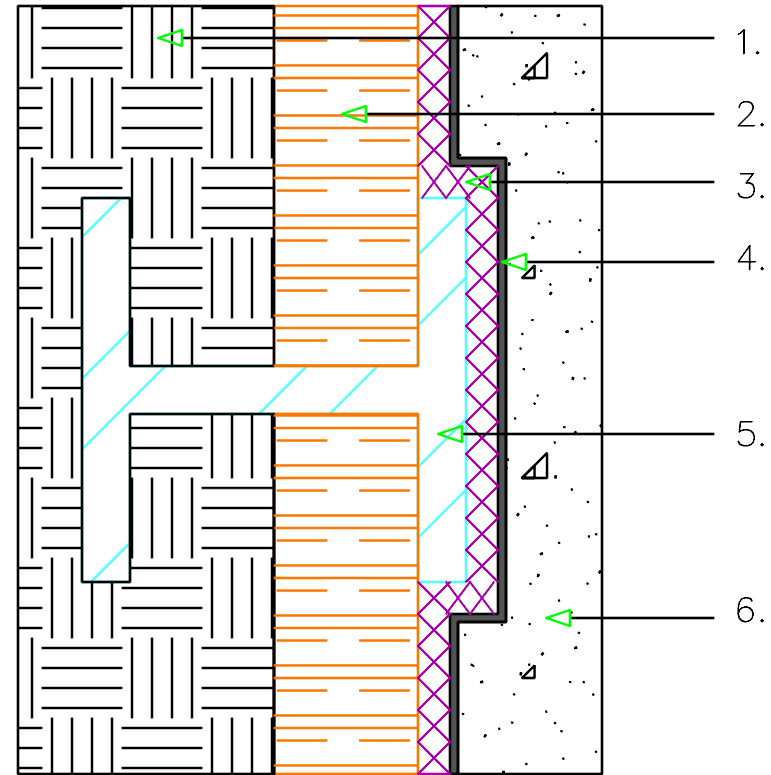

- A. Extend Ecodrain-E over the soldier beam and lagging wall attaching it to the lagging.
- B. Treat the overlaps per the overlap details.

LAGGING WALL DETAIL
EXTERIOR
SOLDIER BEAM

epro™
Waterproofing Systems



LW-2