



Step 1

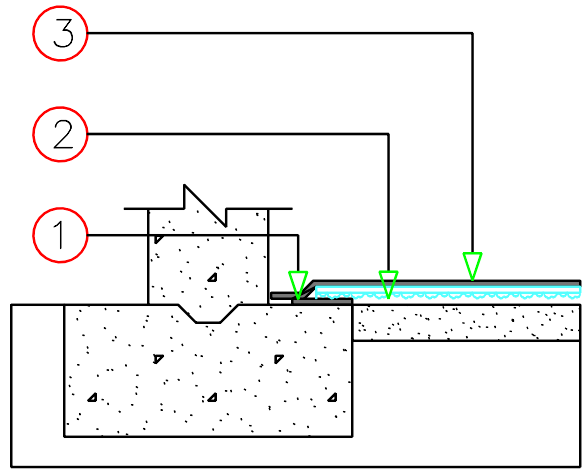

Step 2

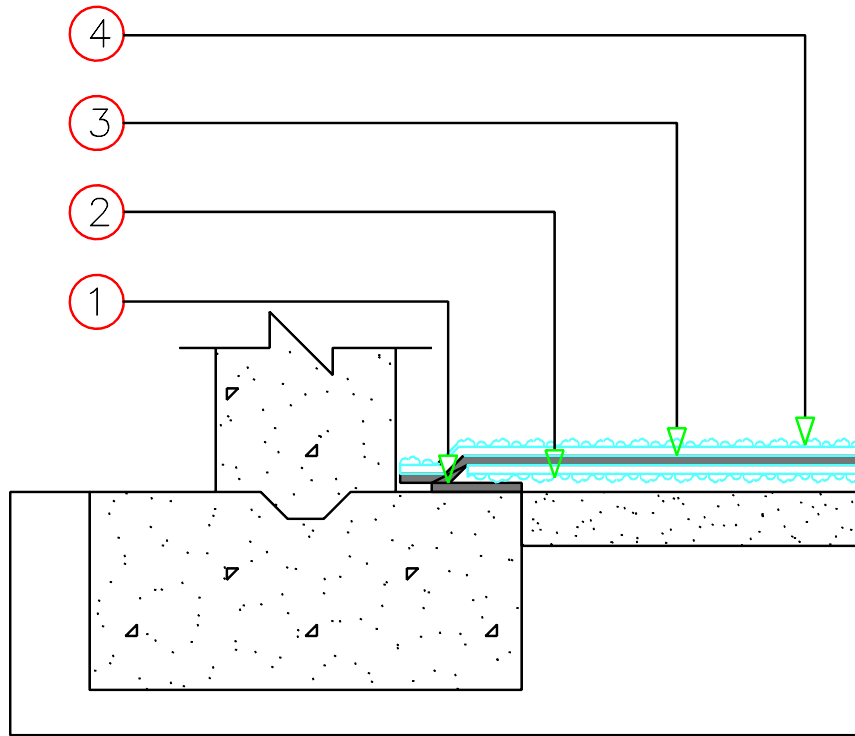

Step 3

- 1 ECOLINE-R
- 2 ECOSHIELD-E OR P (FABRIC SIDE DOWN)
- 3 ECOLINE-S (60 MIL)
- 4 ECOSHIELD-E OR P (FABRIC SIDE UP)

<p>METHANE/MOISTURE BARRIER EXTERIOR FOOTER DETAIL</p>		<p>MB-2</p>
--	--	-------------