



Step 1

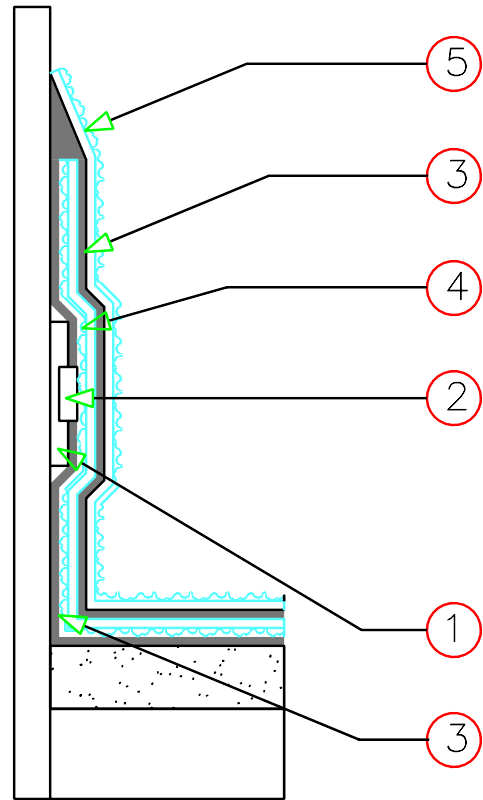

Step 1

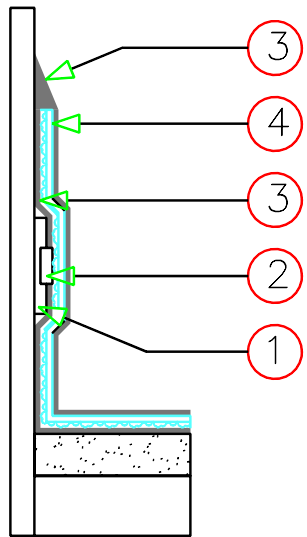

Step 1

- 1 BUTYL RUBBER TAPE
- 2 VELCRO
- 3 ECOLINE-S (60 MIL)
- 4 ECOSHIELD-P (FABRIC SIDE DOWN)
- 5 ECOSHIELD-PP (FABRIC SIDE UP)

<p>METHANE/MOSITURE BARRIER UTILITY BOX DETAIL</p>	<p>epro™ Waterproofing Systems</p> 	<p>MB-6</p>
--	---	-------------